



Namiki / Pilot Product Guarantee

Namiki Emperor, Yukari Royale, Yukari Collection and Chinkin writing instruments are unconditionally guaranteed against failures due to faulty materials or workmanship throughout their life with the original owner. The balance of Namiki and premium Pilot product collections are guaranteed against mechanical failure for a full 3 years from the date of purchase.* The Pilot Knight Collection is guaranteed against mechanical failure for one year from the date of purchase.*

Leads, erasers and ink refills, exhausted in the course of normal use, are excluded from this Guarantee. Also excluded are fountain pen nibs and other parts damaged from impact, unreasonable use, obvious misuse or abuse. We recommend that you use Namiki inks and Pilot refills, leads and erasers to ensure proper long-term functioning of your writing instrument.

In the unlikely event that you experience a mechanical failure with any Namiki writing instrument, we will repair it or replace it without charge. If repair is required, please send your writing instrument to:

Namiki Service Department
3855 Regent Boulevard
Jacksonville, Florida 32224

We at Namiki want you to enjoy the superior craftsmanship and performance resulting from our 90-plus years of writing instrument design and manufacturing experience.

 
* Contingent upon return of product registration card with proof of purchase within 90 days of purchase.

FILLING INSTRUCTIONS (For all Items)

MECHANICAL PENCILS


■ For Writing

- ① To expose lead for writing, push down on the top end of the cap.



■ After Writing

- ① To retract lead, gently push on the lead end while depressing the cap.

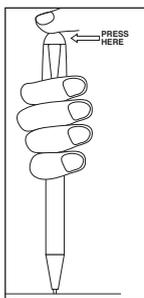



Refilling Lead

■ If Additional Lead in Barrel

- ① The lead may retract during writing if it becomes too short. Press the cap until a new piece of lead protrudes.

■ To Replenish with New Lead

  - ① Pull off the cap.
- ② Remove the eraser and insert new lead(s) into the lead reservoir.
- ③ Replace the cap and press repeatedly until a new lead appears.



CAUTION:

- The lead reservoir is designed to hold a maximum of 4-5 pieces of lead. If too many leads are inserted, the new lead may not properly pass into the guide piece. If new lead still does not appear, please clean the point end with the cleaning pin attached to the back of the eraser.

NOTE:

- All Namiki mechanical pencils come with Pilot lead. We recommend that you use Pilot lead to ensure proper functioning of your Namiki mechanical pencil. Pilot lead is available in 0.5mm and 0.7mm in the following varieties: B, HB, H.

General Pen/Pencil Care

To keep your writing instrument's surface in mint condition, use a soft polishing cloth. Avoid using strong cleaning agents or chemicals.

 
Fountain Pen Care & Cleaning

Always replace the cap on your fountain pen after use. Your fountain pen will function better if cleaned every two months. Remove the ink cartridge or converter and let a slow stream of cold water flow through the nib and barrel. Shake out any excess water and dry the nib with a soft cloth.


FOUNTAIN PENS

■ Using Ink Cartridge

- 1 Unscrew the neck from the pen barrel.




 
- 2 Remove the empty cartridge while holding the neck so that the nib points upward.



- 3 Firmly insert a new cartridge. Put it in straight without turning or twisting, otherwise the valve may not open.

■ Using Plate Press (standard) Converter with Ink Bottle

 - 1 Unscrew the neck from the pen barrel.
- 2 Remove the empty ink cartridge and firmly insert the converter.
- 3 While holding the pen vertically, immerse the nib into ink up to the top of the neck. Press the plate of the converter and release it allowing the ink to be absorbed into the tube of the barrel. Absorption will be completed when the tube restores to its original shape.

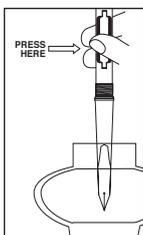

■ Using Twist Converter with Ink Bottle

- 1 Unscrew the neck from the pen barrel and insert the open end of the converter.
- 2 Dip the pen in ink up to the hole in the nib. Be careful not to jam the nib point into the bottom of the ink bottle.
- 3 Twist the black converter screw top clockwise three or four times to fill the converter ink reservoir.
- 4 Ink remaining on the neck or nib should be wiped off with a clean tissue or cloth before using the pen.

NOTE:


 
- Filling the ink converter may be difficult or impossible when the ink supply in the bottle is low. Please open a new bottle.

■ Using Piston Converter with Ink Bottle

- 1 Unscrew the neck from the pen barrel and insert the converter as shown in the drawing below.
- 2 Dip the pen in ink up to the hole in the nib. Be careful not to hit the nib point into the bottom of the ink bottle.
- 3 Pump the piston by pressing the knob four or five times to completely fill the converter ink tank.
- 4 Any ink on the neck or nib should be wiped off with soft tissue paper or a cloth before use.

NOTE:

- When the ink in the bottle is low, it may be impossible to absorb a sufficient amount to fill the ink tank. Please open a new bottle.

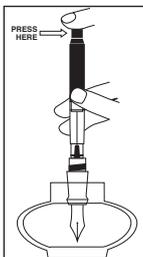


■ Replacing a Converter with an Ink Cartridge

- 1 Hold the neck of the pen with the nib pointing upward and slowly remove the converter while twisting it slightly.
- 2 Any ink remaining in the converter should be washed off with water. Dry the converter completely and store it for future use.

NOTE:

 - When using a fountain pen for the first time, squeeze the inserted cartridge firmly to get the ink to flow down to the nib point.



- Avoid ink spilling by pointing the nib upward while replacing the cartridge. Pilot IC-50 and IC-100 ink cartridges must be used.

 
 
- We also recommend that you use Namiki bottled ink. Using other inks with deposits may eventually cause ink flow problems.

■ Eye Dropper Fill from Ink Bottle

The Emperor Collection fountain pens are supplied with an eye dropper for ink filling.

To fill:


- 1 Unscrew the neck of the pen from the barrel.
- 2 Use the eye drop filler to drop the ink into the barrel.
- 3 When filling is completed, screw the neck onto the barrel.



VANISHING POINT FOUNTAIN PENS

■ For Writing

 - 1 To expose pen nib, press knob until it clicks. This opens the shutter and locks the nib into writing position.





■ After Writing

- 1 To retract nib, press knob as instructed above. The nib will draw in and the shutter will close tightly.


■ Filling with Ink

  - 1 With pen nib retracted, unscrew body.
- 2 Pull out inner pipe from pen head.




■ Using Ink Cartridge

 - 1 Remove cartridge cap from pen holder.
- 2 Insert cartridge into place.
- 3 Cover with cartridge cap.



■ Using Twist Converter with Ink Bottle

 
- 1 Unscrew the neck from the pen barrel and insert the open end of the converter.
(See drawings at top of next column.)



- 2 Dip the pen in ink up to the hole in the nib. Be careful not to jam the nib point into the bottom of the ink bottle.

- 3 Twist the black converter screw top clockwise three or four times to fill the converter ink reservoir.

- 4 Ink remaining on the neck or nib should be wiped off with a clean tissue or cloth before using the pen.

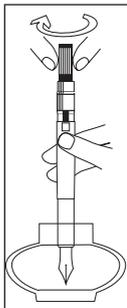



NOTE:

- Filling the ink converter may be difficult or impossible when the ink supply in the bottle is low. Please open a new bottle.

BALL POINT PENS

■ Writing/After Writing

  - 1 Expose the writing tip by pushing down on the head end of the cap.
- 2 Repeat step 1 to retract tip.





NOTE:

- For Knight ball point pens—turn cap clockwise to expose the writing tip.

■ Replacing Empty Refills

  - 1 Remove the cap by turning it.
- 2 Pull out the empty refill.
- 3 Insert a new refill in the barrel.
- 4 Replace the cap.



NOTE:

- Use of Pilot BCGR2 (Dr. Grip Center Of Gravity) refills is recommended to ensure proper mechanical functioning of Namiki and Pilot ball point pens.

 
 
ROLLING BALL PENS

■ Writing/After Writing

- 1 Remove the cap by turning it to expose the writing tip.
- 2 Replace cap after writing.

■ Replacing Empty Refills

- 1 Remove the cap by turning it.
- 2 Unscrew the neck from the barrel by turning.
- 3 Pull out the empty refill.
- 4 Insert a new refill in the barrel.
- 5 Reconnect the neck on the barrel by turning.



NOTE:

- Use Pilot BG25R and BG27R refills to ensure proper mechanical functioning of Namiki and Pilot rolling ball pens.